

Capsul PB4000 Printer Wi-Fi Setup Guide



1. **Find the Capsul PB4000's AP-Mode SSID**
 - a. From the control panel, hit the **OK** button



- b. Use the arrow buttons to highlight **Information** and press **OK**
 - c. Use the down arrow to highlight **AP SSID** and press **OK**
 - d. Make note of the AP SSID. It will look like *PRT-54187A*.


2. **Connect your Mobile Phone**
(or other Wi-Fi-enabled device like a laptop computer or tablet)
 - a. On your mobile phone go to **Settings > Wi-Fi** and connect to the Capsul PB4000's SSID, which you found in Step 1. You may receive a message that the network has no internet connection, that is expected.
 - b. Open a web browser on your mobile phone such as Safari, Chrome, or Edge.
 - c. Enter **192.168.200.1** in the address field and hit **Go**. This will load the Capsul PB4000's Wi-Fi setup page.

Continue to the next page

3. Use the Capsul PB4000's web page to connect the printer to your Wi-Fi network
 - a. On the PB4000's web setup page, select **Network** and then **Wi-Fi Settings**




- b. Click on the **Search AP** link to search for available networks

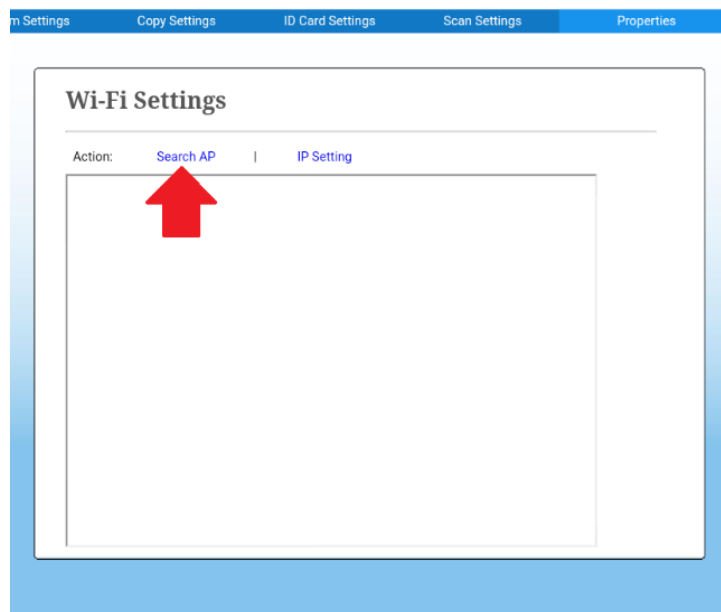


Continue to the next page


- c. Select the network that you would like to connect the printer to

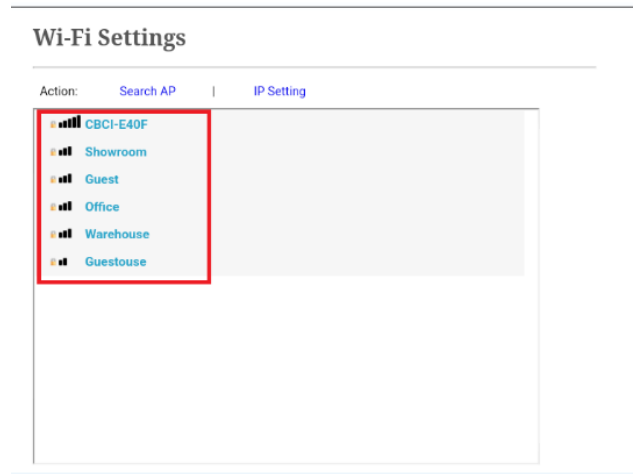

- d. Enter the password for the Wi-Fi network and select **Connect**

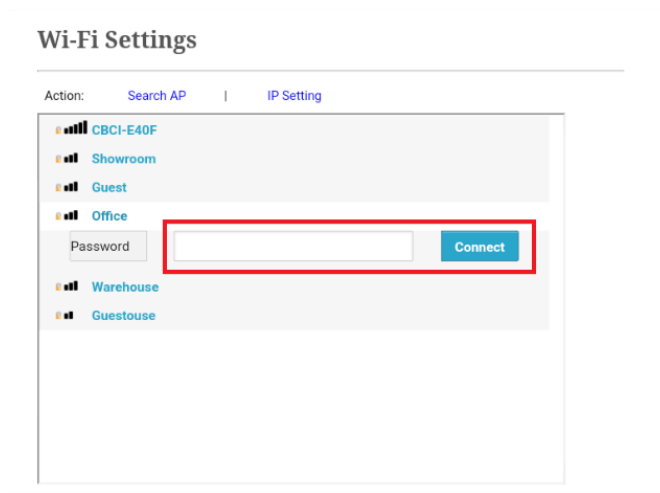

- e. You will see a message to let you know that the wired network will be disabled, that is normal.

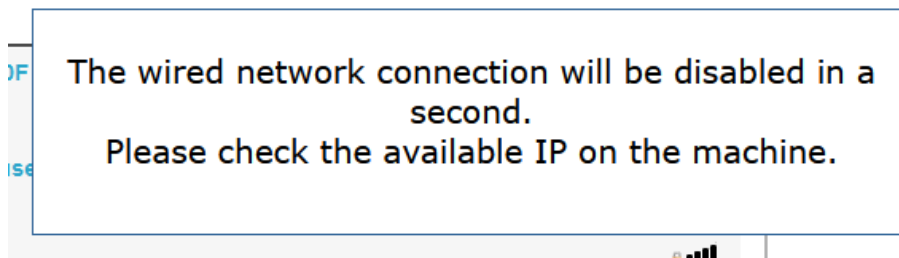

- f. After a few seconds you will see the IP address for the printer appear on the screen.
g. Once the printer is connected remember to switch your phone back to your regular Wi-Fi network for internet access