

Capsul MB3300 MFP

Wi-Fi Setup Guide



1. Find the Device's AP-Mode SSID

- a. Once the Capsul MB3300 is powered on, make note of the SSID shown next to the Wi-Fi symbol on the screen



- b. Alternatively, the SSID can also be found in the Capsul MB3300's menu by following the instructions below:
 - On the device, press the **Menu** button
 - Use the arrow keys to go to **Information** and select **OK**
 - Highlight **AP Mode SSID** and select **OK**
 - Make note of the SSID. It will look like *PRT-53BEFD*.


2. Connect your Mobile Phone

(or other Wi-Fi-enabled device like a laptop computer or tablet)


- a. On your mobile phone go to **Settings > Wi-Fi** and connect to the Capsul MB3300's SSID, which you found in Step 1. You may receive a message that the network has no internet connection, which is normal.
- b. Open a web browser on your mobile phone such as Safari, Chrome, or Edge.
- c. In the address field, enter **192.168.200.1** and hit **Go**. This will load the Capsul MB3300's Wi-Fi setup page.

Continue to the next page


3. Use the Capsul MB3300's Wi-Fi setup page to connect the printer to your Wi-Fi network
- a. On the MB3300's web setup page, select **Properties** at the top right of the screen

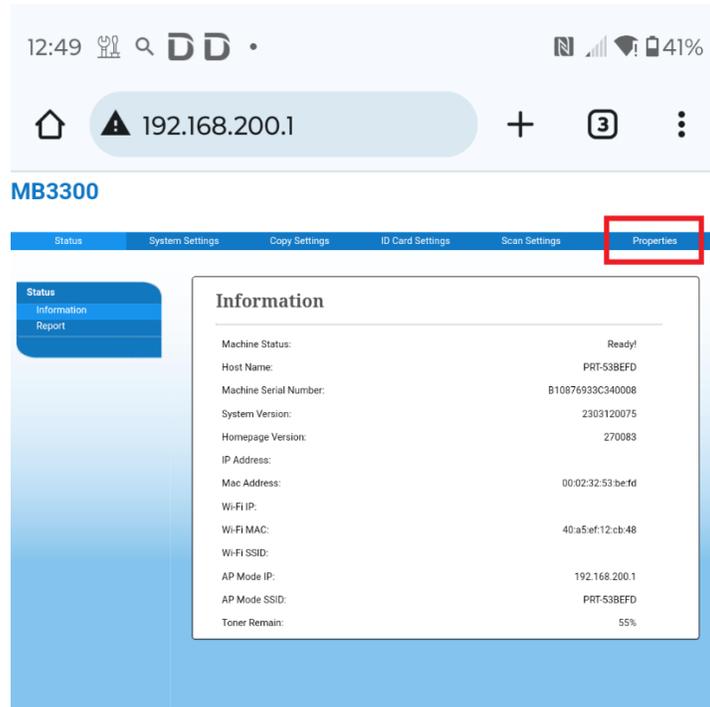


- b. Select **Wi-Fi settings** from the list on the left side of the screen

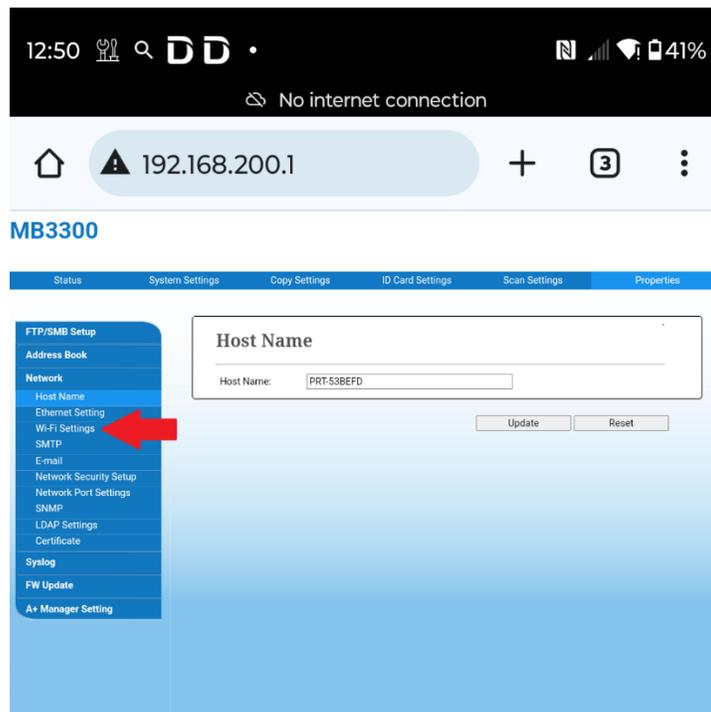


- c. Click on the **Search AP** link to search for available Wi-Fi networks.

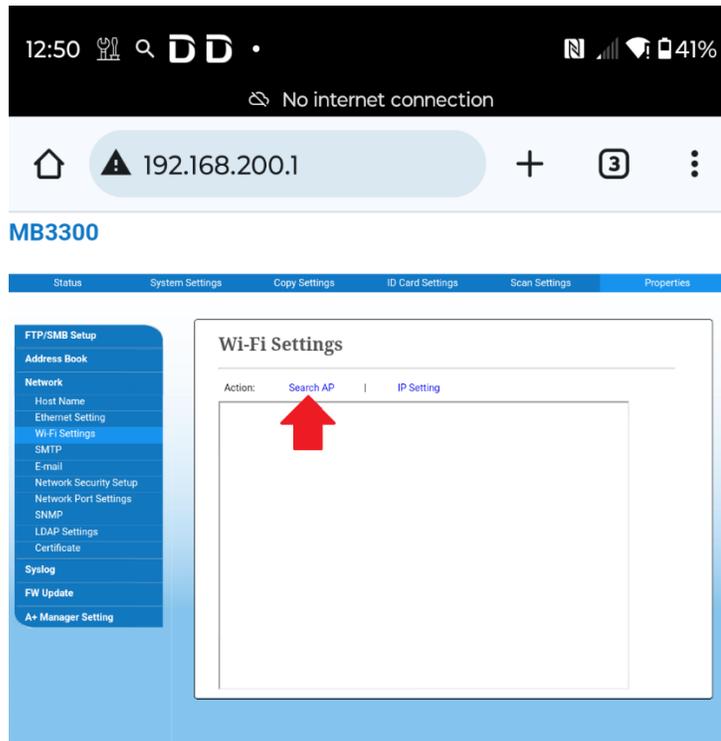


- d. Select the network that you would like to connect the printer to

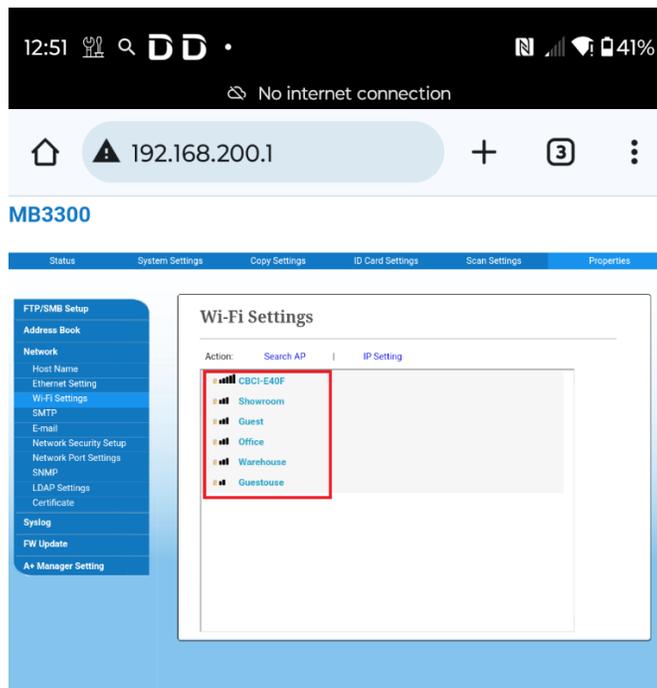

- e. Enter the Wi-Fi network password and select **Connect**

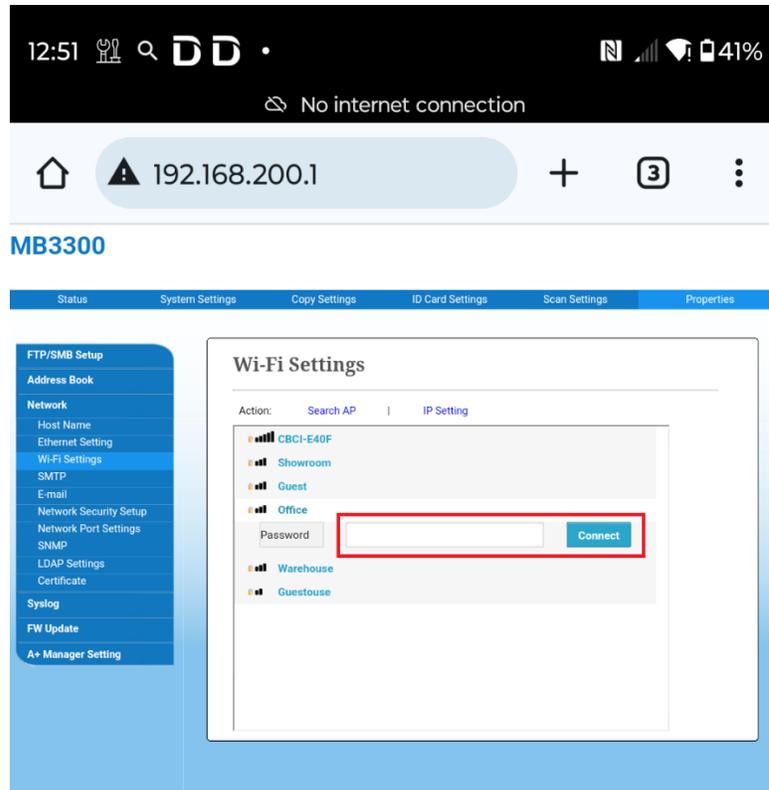

- f. You will see a message to let you know that the wired network will be disabled, which is normal.

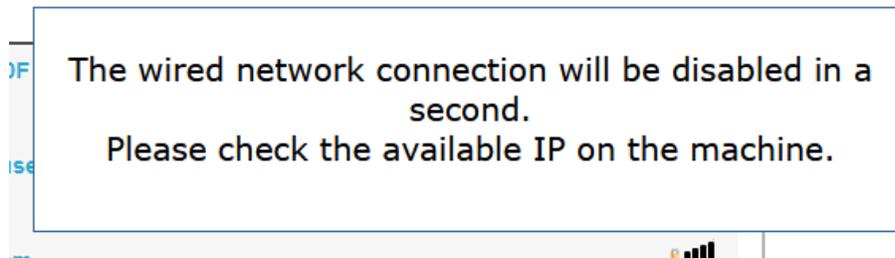

- g. After a few seconds you will see the IP address for the printer appear on the screen.
- h. Once the Capsul MB3300 is connected to Wi-Fi, remember to switch your mobile phone back to your regular Wi-Fi network for internet access